


Interface Cable, RI-300 to Vertex VXR-7000 Desk Top Repeater

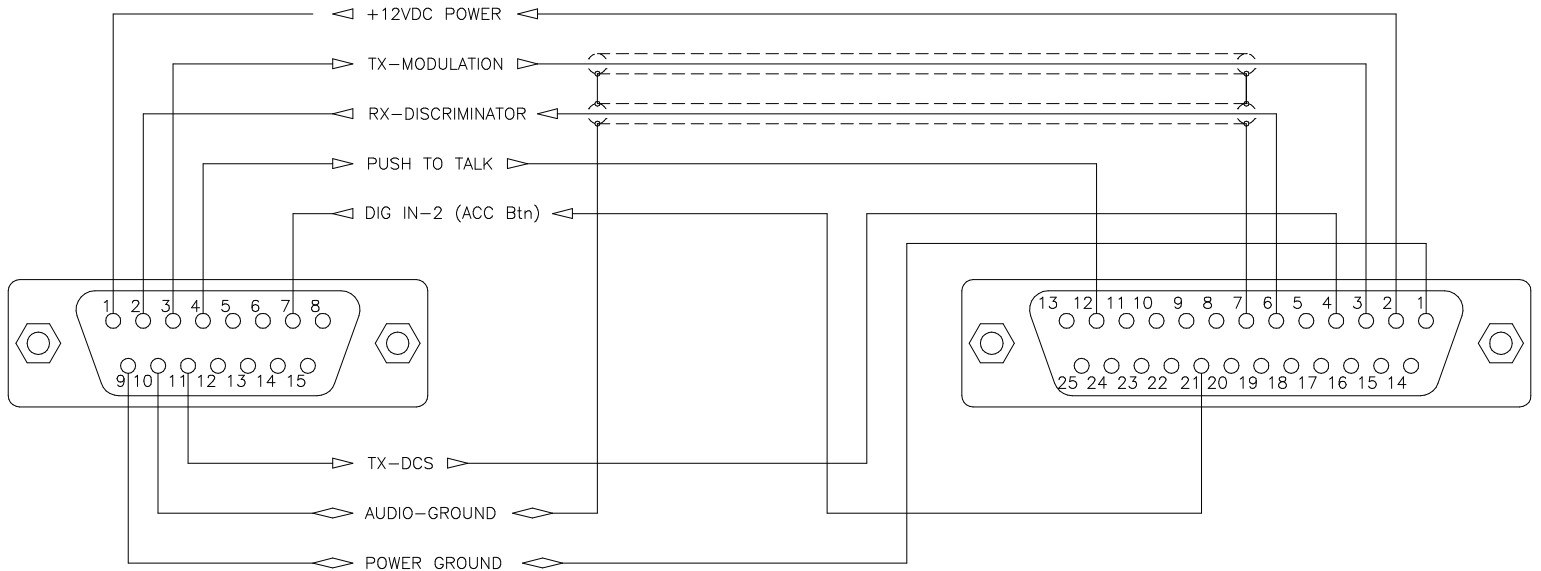

RI-300 Radio Interface Connector
DB-15 Female

VXR-7000 ACC Connector
DB-25 Male

VXR-7000 Programming

When programming the VXR-7000, include the following settings for each channel.

1. Decode-CTCSS = Off
2. Decode-DCS = (Select code that will never be used, this disable local repeater audio)
3. Court Blip = Off
4. Rev Bst = Off
5. Encoder-CTCSS = Off
6. Encoder-DCS = Off
7. Base TOT = On
8. Base Guard = On
9. LOut = Off

VXR-7000 Front Panel Settings

For the VXR-7000 to operate with the RI-300, use the following front panel settings.

1. Repeater Button = On
2. Remote Button = On